


1. Remove both front lower kick panels.
2. Remove both B pillar covers
3. Remove all 4 door pin switches by removing the screw under each access cover on the switch itself
(see pic 1)
4. At each corresponding door pin switch connect the negative (black) lead of each light to the wire attached to the switches
5. on each side of the car you may connect the positive (red) lead of the front and rear lights together and route the wires to the lower kick panels
6. At this point you may hide wires and reinstall the B pillar covers.
7. In the left kick panel area locate the under dash fuse box (see pic 2).
8. refer to (pic 3) and locate connector 28 on the fuse box
9. connector 28 will contain a blue wire with a yellow stripe, this wire should have 12v constantly and should be checked with an automotive 12v testlight.
10. Connect the left side positive leads (red) to this blue and yellow wire.
**be sure to only splice into this wire DO NOT disconnect in any way from the fuse box **
11. move to the right side of the car and locate the white connector behind the stock amplifier (see pic 4) this connector will be labeled c731 on the picture
12. in connector c731 locate the yellow wire with the green stripe
13. once again this wire should have 12v constantly and should be verified with an automotive 12v test light
** DO NOT DISCONNECT**
14. Splice the right side 12v lead to the yellow and green wire
15. at this point all door light should be working and you can reinstall all removed trims and hide the wires

Interior Lights


– Door Courtesy and Trunk Lights

 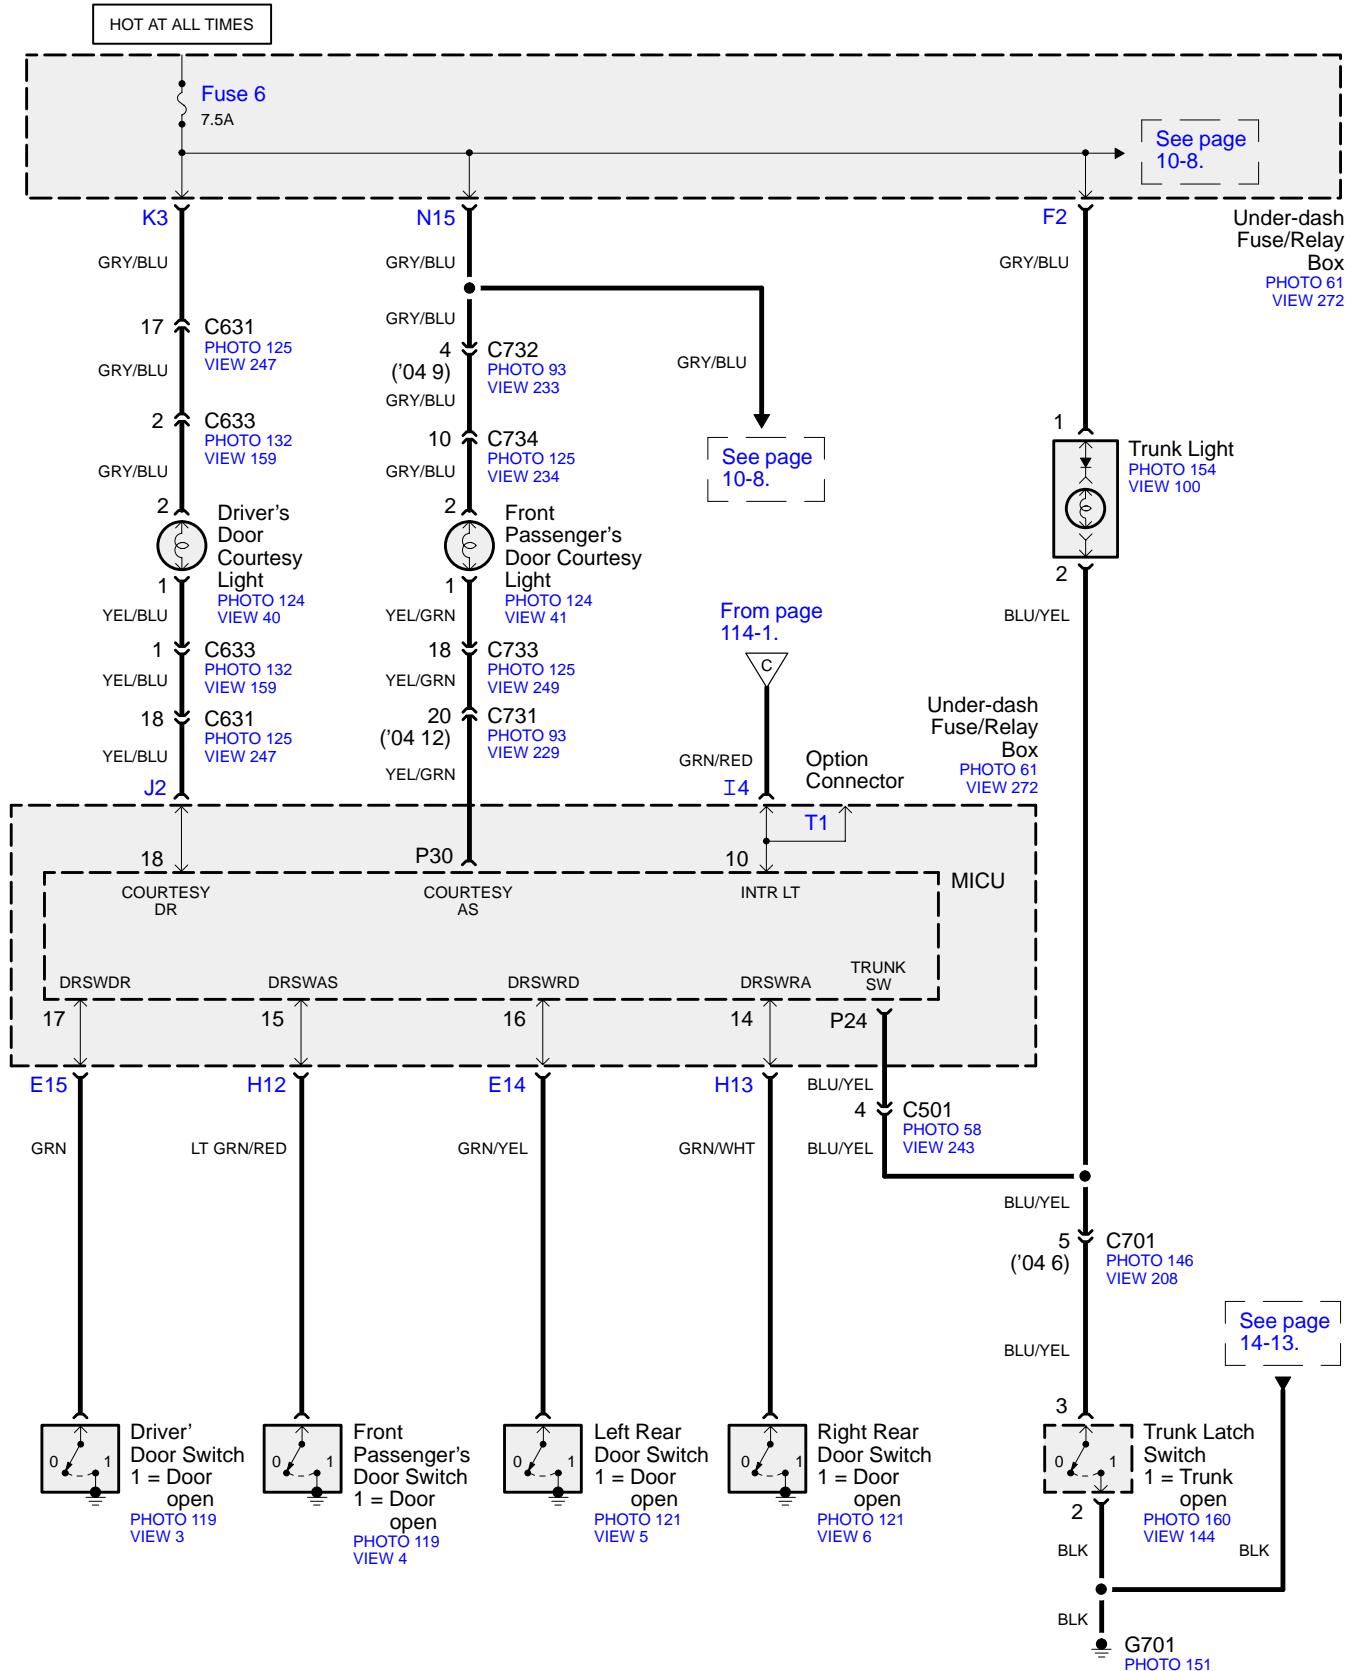


119. Left B-pillar (Right Similar)



61. Behind Left Kick Panel

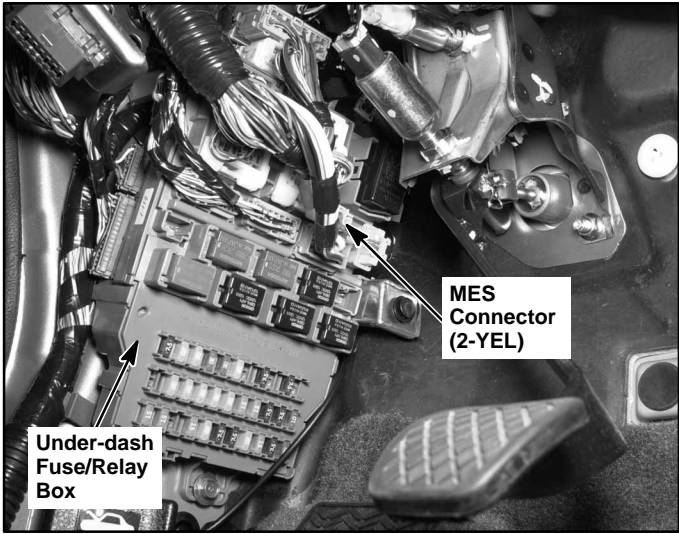




Fuse/Relay Boxes

- Under-dash Fuse/Relay Box

Connector-to-Fuse/Relay Box Index

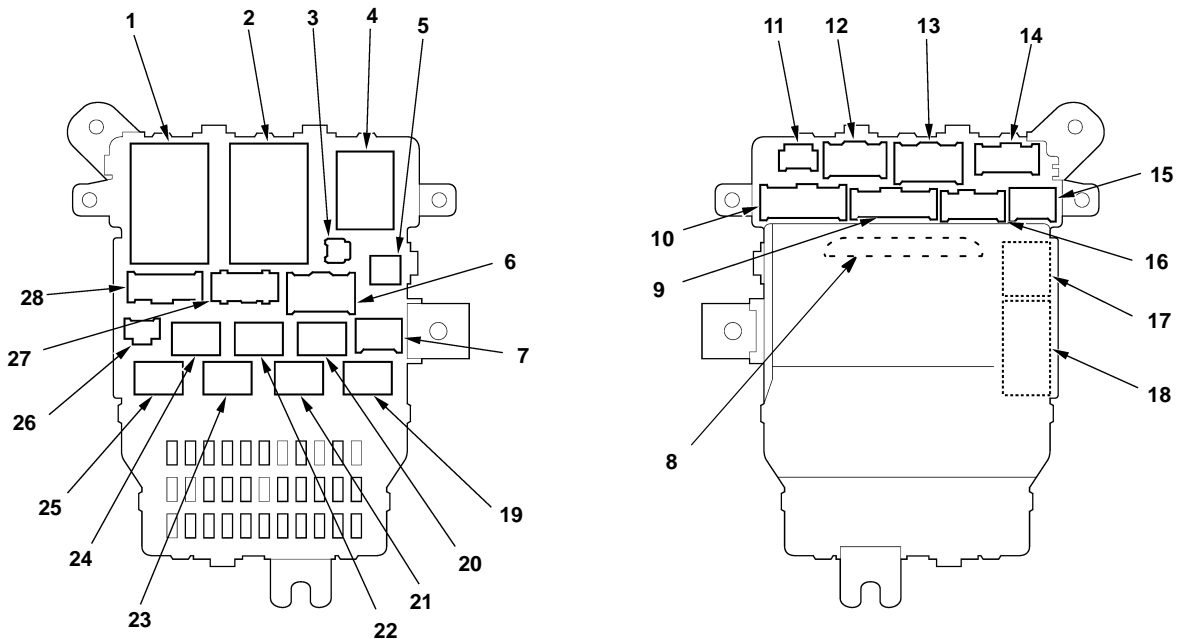

Ref	Socket	Cavities	Connects to
1	X	39	Dashboard wire harness (see page 203-24)
2	N	45	Dashboard wire harness (see page 203-24)
3	R (MES connector)	2	Dashboard wire harness (see page 203-24)
4	Turn signal/hazard relay	6	
5	S	2	Dashboard wire harness (see page 203-24)
6	A	6	Dashboard wire harness (see page 203-24)
7	T	6	Optional connector
8	MICU	25	(Plugs directly into the fuse/relay box)
9	E	16	Floor wire harness (see page 203-32)
10	F	14	Floor wire harness (see page 203-32)
11	I	5	Roof wire harness (see page 203-36)
12	C	12	Engine compartment wire harness (see page 203-20)
13	B	6	Engine compartment wire harness (see page 203-20)
14	D	17	Engine compartment wire harness (see page 203-20)
15	G	6	Floor wire harness (see page 203-32)
16	H	14	Floor wire harness (see page 203-32)
17	Q (MICU)	14	Dashboard wire harness (see page 203-24)
18	P (MICU)	30	Dashboard wire harness (see page 203-24)
19	Starter cut relay	4	
20	Accessory power socket relay	4	
21	A/F sensor relay	4	
22	PGM-FI main relay 1	4	
23	Power window relay	4	
24	Ignition coil relay	4	
25	PGM-FI main relay 2	4	
26	M	3	MICU service check connector
27	K	12	Driver's door sub-harness A (see page 203-38)
28	J	21	Driver's door sub-harness A (see page 203-38)

93. Behind Glove Box

